

ROSETTES & DECORATIVE ACCESSORIES INSTALLATION INSTRUCTIONS



2197 Canton Road, Suite 209 - Marietta, GA 30066
770.590.1999 phone - 770.590.3190 fax
www.architecturalspecialties.com

Rosettes and decorative accessories from Century add elegant detailing to any home décor. Made from high-density furniture grade polyurethane, these finishing touches are exquisitely detailed from hand-crafted molds insuring a quality product every time. Every rosette and decorative accessory can be finished with either latex or oil base paint.

Tools & Materials You Will Need

Sponge or clean cloth
Caulking gun
Elastomeric adhesive caulk [White Lightning® 3006 recommended]

Optional Tools & Materials

Putty knife
Hammer and nail set
6d or 8d finishing nails [bright finish or electro-galvanized] fasteners must penetrate substrate a min. of ½" to ¾" inches.
Extra fine sandpaper

Before Installation

- 1 Due to the small size and intricate detail of these products, we recommend that you finish [paint or faux finish] the product before installation.
- 2 After installation touch-up any area as needed.

Surface Preparation

- 1 Clean all surfaces free of dirt and loose particles with a clean cloth or sponge.
- 2 Make sure area is completely dry before installing product.
- 3 Measure and mark the location where you want to install the product.

General Installation

- 1 Lay the rosette or decorative accessory face down on a surface that will not mar the product face, such as a clean cloth.
- 2 Apply a ½" continuous bead of latex adhesive/caulk along the back edge [A].
- 3 Gently press the rosette or accessory into place. Apply caulk around edge as needed and smooth excess caulk with your finger or putty knife, giving the appearance of the accessory being part of the wall or ceiling [B]. With a damp sponge wipe any excess adhesive/caulk from edges.
- 4 Option: You may want to tack or secure larger accessories into place using finishing nails. If you want to remove nails after adhesive/caulk dries, leave approximately ½" nail exposed for easy removal. TIP: Nail components in ornamentation areas of accessories into wall. When adhesive/caulk dries [approx. 2-3 hours] either remove finishing nails or use nail set to countersink nails, making sure that nails penetrate wall at least ½" to ¾".
- 5 Fill nail holes with adhesive/caulk - smooth the surface with your finger or putty knife. Once caulk is dry and if needed, *lightly* sand any rough spots with extra fine sandpaper.
- 6 Touch up rosettes and accessories with paint as needed.


Always Follow These Safety Suggestions

- 1 Follow good construction practices.
- 2 When using power tools, adhesives and finishing materials [such as paint or stain], be sure to follow manufacturer's instructions.
- 3 Always wear safety goggles when using a power tool or hammer.
- 4 Always use the right tool and/or equipment for the job.

Century rosettes and decorative accessories function as decorative elements only, and are not designed to support electrical fixtures or provide any load bearing capacity. Century Architectural Specialties shall not be responsible if any failure to comply with these installation instructions results in the products failing to perform the purpose intended.

Warranty

Century Architectural Specialties warrants all its products to be free from manufacturing defects for a period of three (3) years from date of purchase. This warranty does not include damage or other problems resulting from improper installation, misuse or normal wear and tear. Century's liability is limited to product replacement cost. It does not include freight or handling expenses, installation cost or any other costs or expenses incurred in connection with the purchase or use of our products.

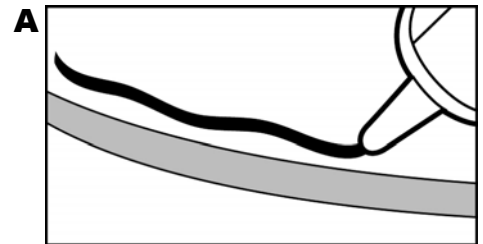

Apply continuous bead of adhesive to edges



Apply paintable caulk to edges